

WWW.INFIRE.PL



INSTALLATION CARD
BIO-FIREPLACE INSIGNIO *weight 20 kg*

**INFIRE KAROL LIPKA
UL. OBWODOWA 3
11-500 GAJEWO**

Kontakt:
biuro@infire.pl
infire@wp.pl

THIS DOCUMENT IS PART OF THE DEVICE

INSTALLATION

Please make sure that the set delivered to you contains all the elements, that is:

- fireplace (housing)
- hearth (steel rectangular tank)
- glass and steel mountings for glass panel
- steel long handle for adjusting and extinguishing a flame

1. Choose the room in which you want to use the fireplace. The room in which the device will be used should have a minimum area of 20m².
2. When using the fireplace in a room, the window must be tilted.
3. The room in which the fireplace is used should always be ventilated, as it absorbs oxygen from the air. Do not install the fireplace in a place where it will be exposed to draught!
4. Place the fireplace on a level and stable floor where it will not be exposed to overturning and draughts.
5. Place the rectangular steel tank (the hearth) in the rectangular opening inside the fireplace.
6. Screw the silver fixings to the frame of the fireplace according to the holes and screw the glass onto them.
7. Do not place any objects on the housing or inside the fireplace.
8. Do not place any flammable materials in a distance of at least 2 m from the device.
9. Convection air slots and rear ventilation should not be obstructed.

Infire is not liable for damage resulting from incorrect installation of the fireplace or from installation of the fireplace on an unsuitable wall/floor.